


ELEVATOR INSTALLATION GUIDE

- 1 1/8" Cable Through Grommets at the Top of the Panel
- 2 Anchor Both Sides
- 3 Premium Grade Fluorescent Orange Strong Man Safety Netting (5/32" PVC Or 1/4" Polyethylene Mesh)
- 4 2"X4" Lumber, One Side to be Removable for Access
- 5 Toe Board 3 1/2" High
- 6 3/4" Conduit Through Loop in Netting with Clamp on Each Side to Attach Conduit to Toe Board
- 7 Turnbuckle

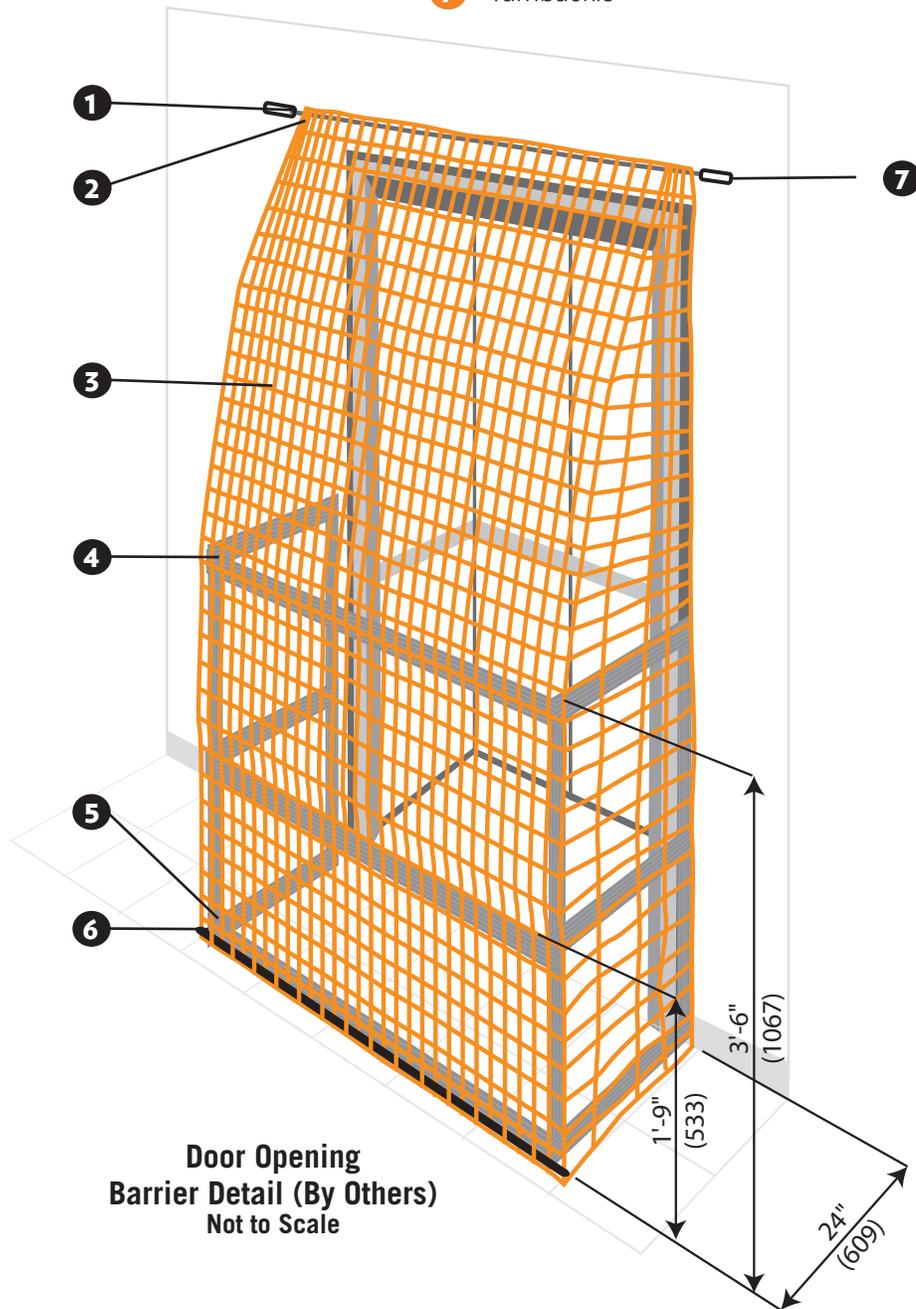

DEBRIS &
SAFETY NETTING

STRONG MAN SAFETY PRODUCTS

Pompton Plains, NJ | Houston, TX | Los Angeles, CA | Chicago, IL | Miami, FL | Kent, WA
1-800-950-6999 | strongman.com | sales@strongman.com

The uses of these products are not limited to the above. Conditions that could affect the safe installation of this material may vary from site to site. Purchaser/user is solely responsible for the proper installation and testing at the installation as may be appropriate or required by local, state or federal regulations. The Purchaser/user must have a qualified person inspect the installation and submit any questions regarding the particular application of the product to a qualified engineer. Strong Man Safety Products disclaims responsibility for the results of any inappropriate or inadequate installation.

