


SUGGESTED INSTALLATION METHOD

- 1 UV-Treated Cable Ties
- 2 Aircraft Cable OSHA Required
- 3 Toeboard Fasten to Floor by Furring Strips or Large Head Nails or Power Actuated Fasteners
- 4 42" or 60" Depending on Local Laws
- 5 21" or 30" Depending on Local Laws

For protection on open sides
of buildings

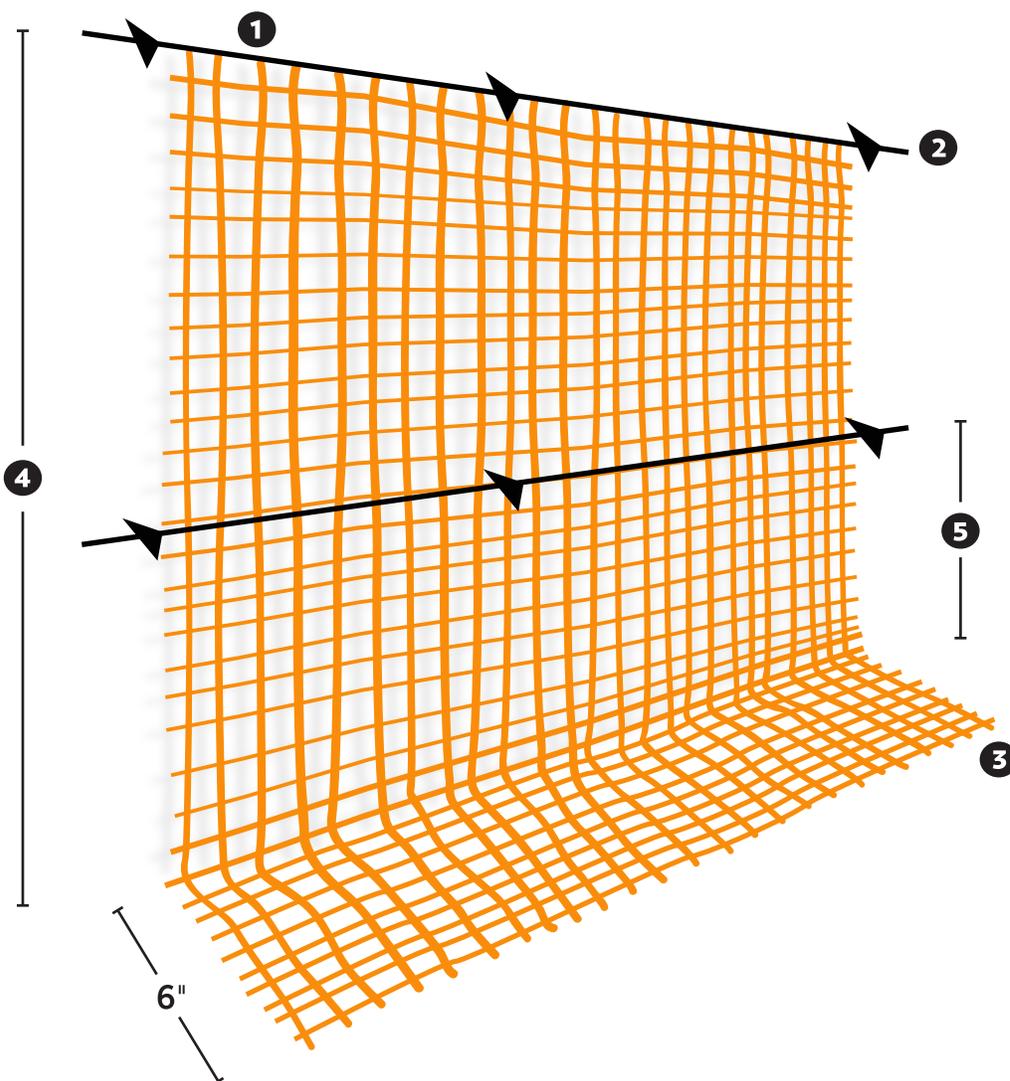

The suggested installation methods depicted and described above may not be appropriate in all circumstances as conditions that could affect the safe installation of the material may vary from site to site. This, this suggested installation is provided only as a general guidance as to one typical installation method that may or may not be appropriate for a particular application. Purchaser/ user is solely responsible for the proper installation as may be appropriate or inspect the installation and submit and questions regarding the particular application of the product to a qualified engineer. Strong Man Safety Products disclaims any responsibility for the results of any inappropriate or inadequate installation.